



DB9(M) →	
1	
2	Stepping motor phase A
3	Stepping motor phase /A
4	Stepping motor phase B
5	Stepping motor phase /B
6	
7	Limit Switch 2
8	Limit Switch 1
9	Logic ground

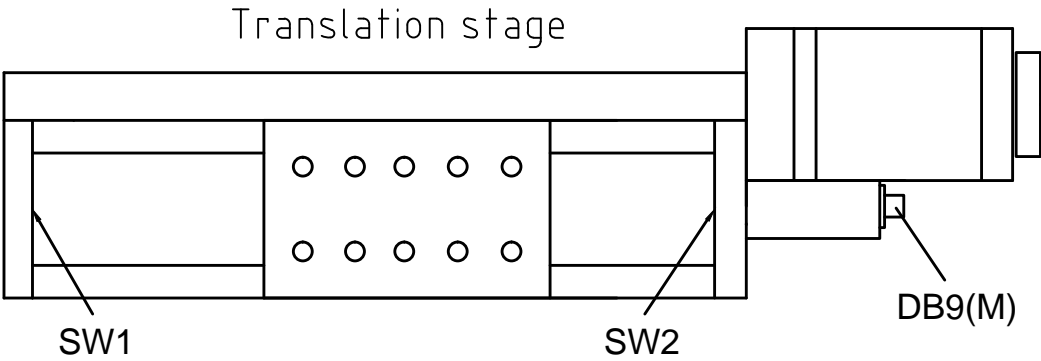

<b>Translation Stage</b> <b>8MT50-XXBS1</b>			
<i>Wiring Diagram</i>		2009.11.20	Sheet 1/1
		J. Kimtys	